Modar®

UNIVERSAL MAGIC CORNER LEFT OPENING


INSTALLATION MANUAL


7116834

Model / 90


COMPONENTS

A  1pc

B  1pc

C  2pcs


D  1pcs  2pcs (M6X14)


E  2pcs (M5X10)

F  20pcs (M4X14)


G  2pcs (6X22X3)

H Left 4pcs  Right 4pcs 

I  2pcs (BIG) 2pcs (SMALL)


J  2pcs


CABINET SIZE

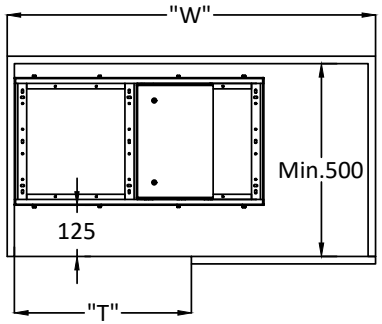

UNIT: MM

Interior/Inner H	≥620
W	900-1000
T	≥380

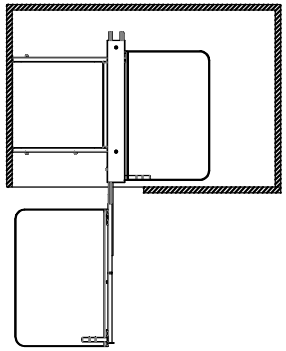


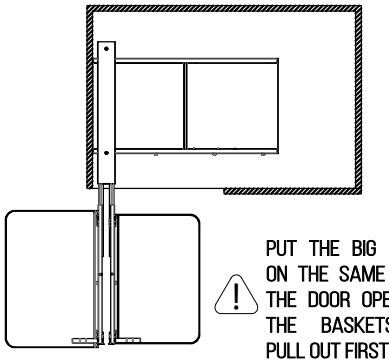


PUT THE BIG BASKETS ON THE SAME SIDE AS THE DOOR OPENING, I.E. THE BASKETS THAT PULL OUT FIRST.


INSTALLATION

1 ASSEMBLE THE PARTS

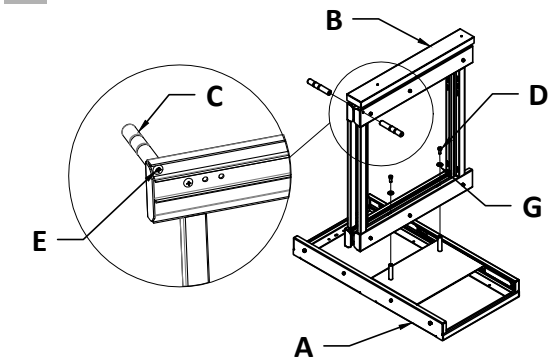


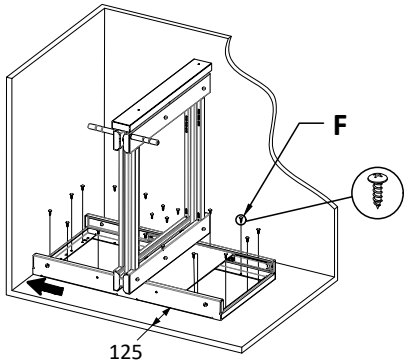

2 FIT PART J (CAN SKIP IF NO J)

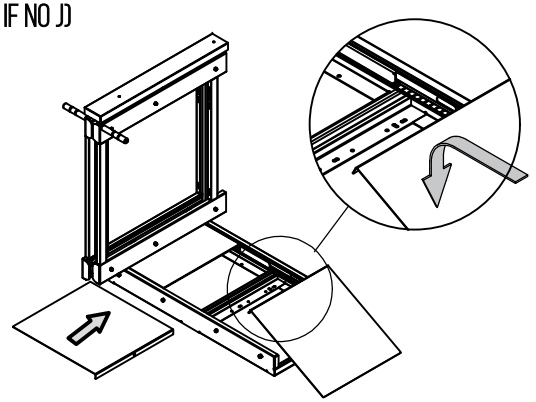

3 HANG ON THE BASKETS

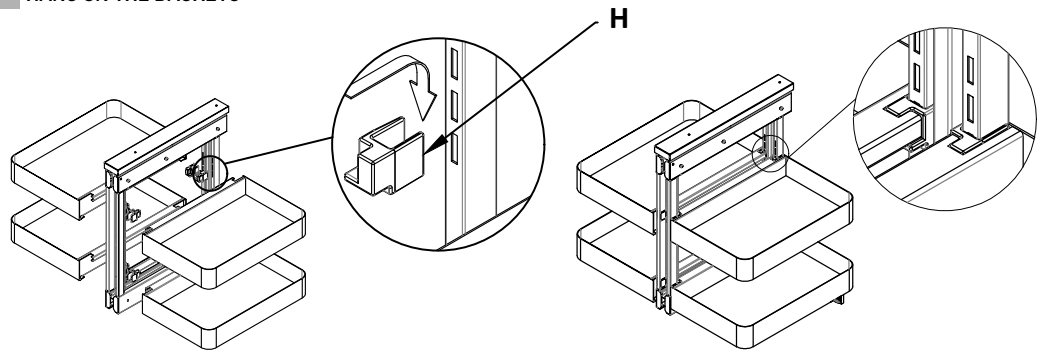

Modar®

UNIVERSAL MAGIC CORNER RIGHT OPENING


INSTALLATION MANUAL

7116834

Model / 90


COMPONENTS

A  1pc

B  1pc

C  2pcs


D  1pcs  2pcs (M6X14)


E  2pcs (M5X10)

F  20pcs (M4X14)


G  2pcs (6X22X3)

H Left 4pcs  Right 4pcs 

I  2pcs (BIG) 2pcs (SMALL)


J  2pcs


CABINET SIZE

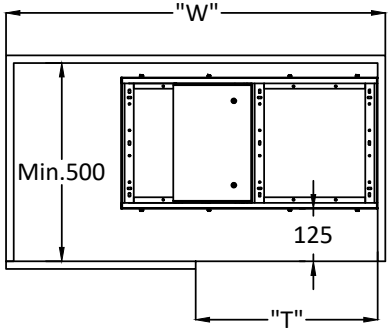

UNIT: MM

Interior/Inner H	≥620
W	900-1000
T	≥380

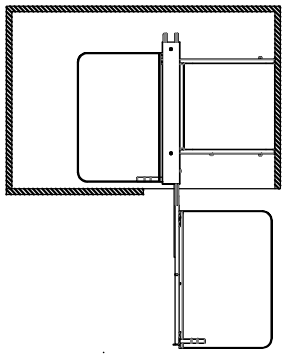


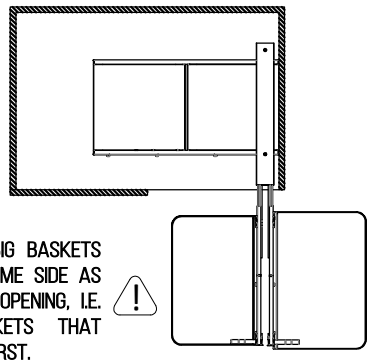


PUT THE BIG BASKETS ON THE SAME SIDE AS THE DOOR OPENING, I.E. THE BASKETS THAT PULL OUT FIRST.

INSTALLATION

1 ASSEMBLE THE PARTS

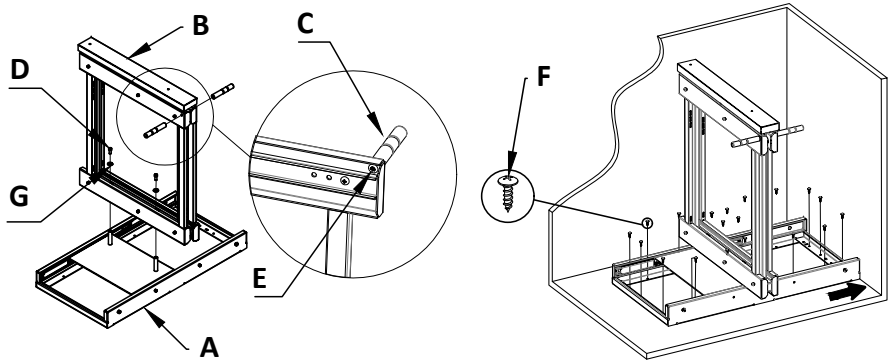

2 FIT PART J (CAN SKIP IF NO J)

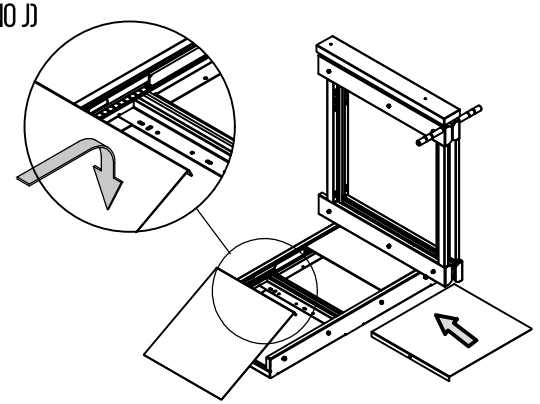

3 HANG ON THE BASKETS

